

# ASSEMBLY INSTRUCTION


MODEL : PORTSEA  
 ITEM : BED (QUEEN)

NO	HARDWARE LIST	QTY
1	BOLT M8 X 18MM	8 PCS
2	SCREW M4 X 38MM	9 PCS


Please follow this assembly instruction step by step

## STEP 2


\*NOTE : PLEASE REFER ASSEMBLY INSTRUCTION FOR CENTER SUPPORT.

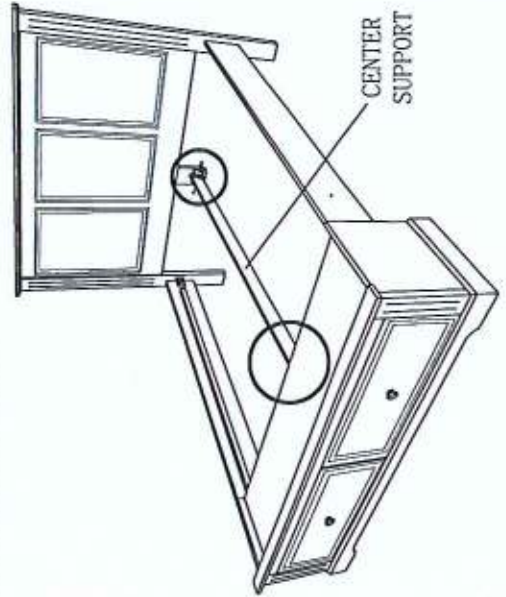


## STEP 3

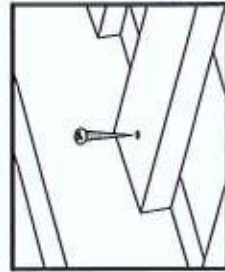


SCREW M4 X 38MM

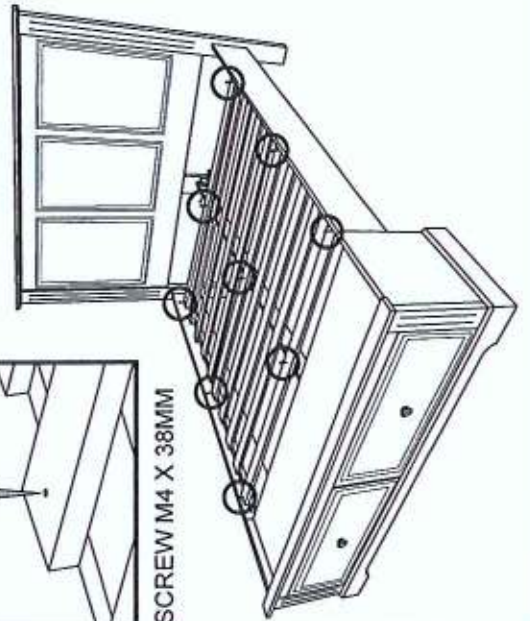

## STEP 1

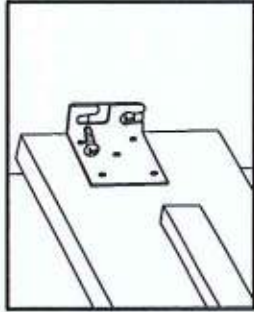


BOLT M8 X 18MM

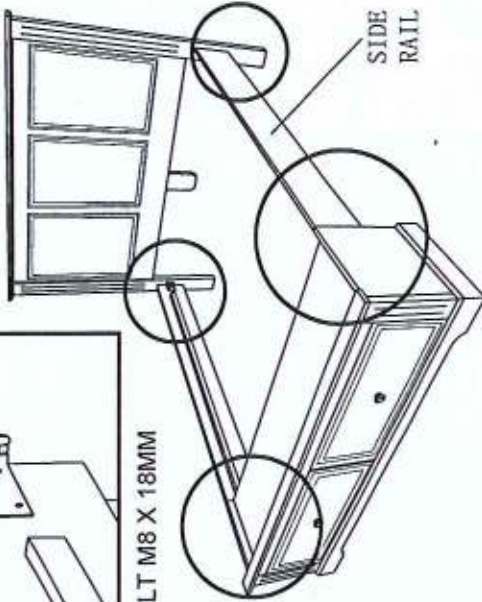


SIDE RAIL


COMPLETE

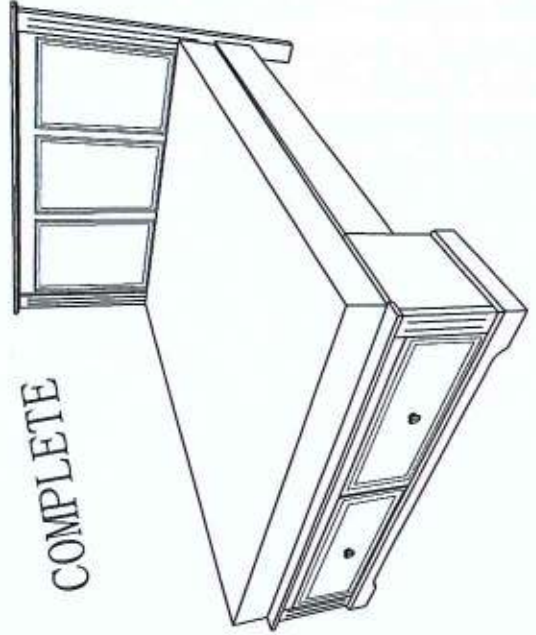

HEADBOARD

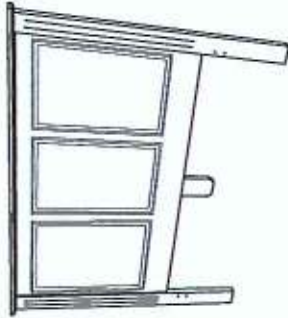

FOOTBOARD

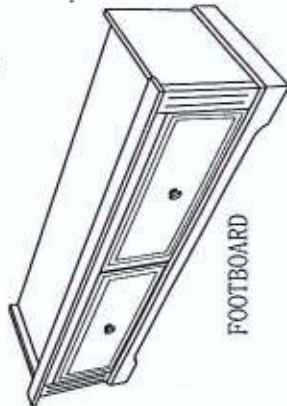


## ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED  
(QUEEN)



please follow this assembly instruction step  
by step

NO	HARDWARE LIST	QTY
1	JCRC N6 X 40MM	2 PCS
2	ALLEN KEY N6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	4 PCS
5	U BRACKET	2 PCS
6	SCREW M4 X 20MM	4 PCS

STEP 1 U BRACKET AT THE HEADBOARD

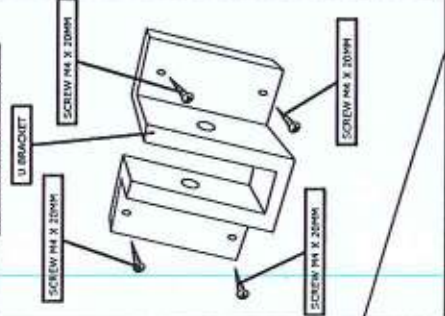

STEP 2 U BRACKET AT THE FOOTBOARD

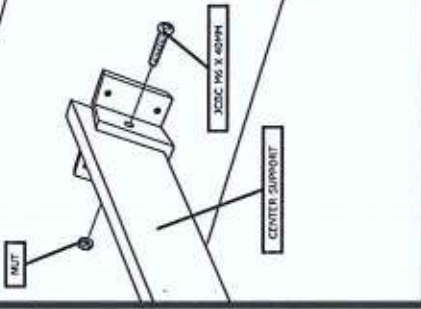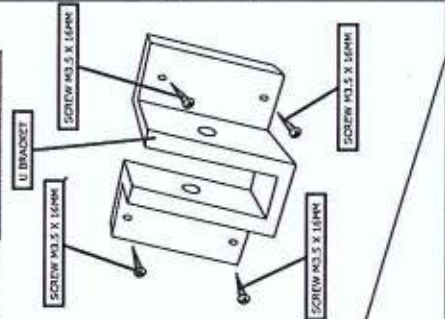


## ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED  
(QUEEN)



please follow this assembly instruction step  
by step

NO	HARDWARE LIST	QTY
1	JCRC N6 X 40MM	2 PCS
2	ALLEN KEY N6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	4 PCS
5	U BRACKET	2 PCS
6	SCREW M4 X 20MM	4 PCS

STEP 2 U BRACKET AT THE FOOTBOARD

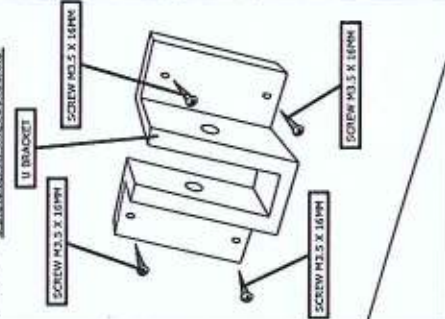

STEP 1 U BRACKET AT THE HEADBOARD

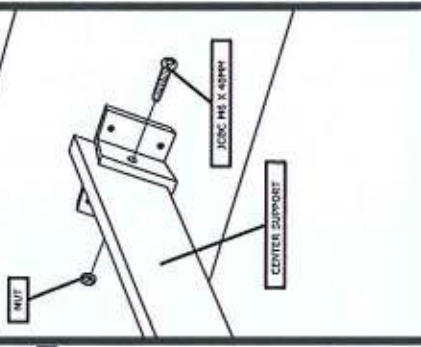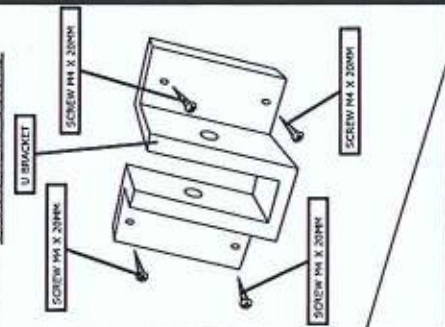


## ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED  
(QUEEN)



please follow this assembly instruction step  
by step

NO	HARDWARE LIST	QTY
1	JCRC N6 X 40MM	2 PCS
2	ALLEN KEY N6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	4 PCS
5	U BRACKET	2 PCS
6	SCREW M4 X 20MM	4 PCS

STEP 1 U BRACKET AT THE HEADBOARD

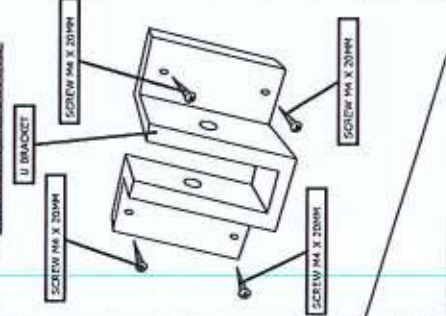

STEP 2 U BRACKET AT THE FOOTBOARD

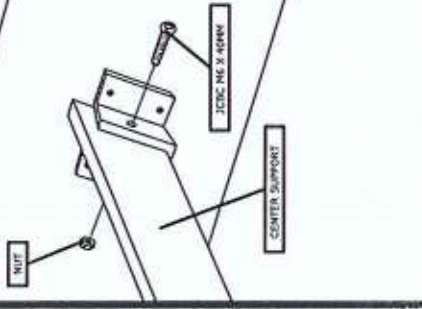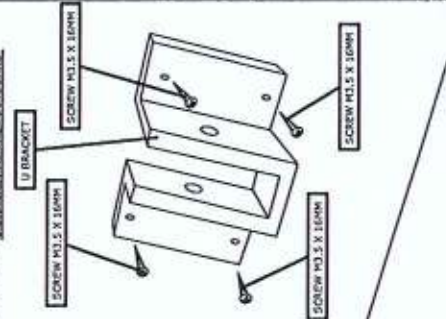


## ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED  
(QUEEN)

please follow this assembly instruction step  
by step

NO	HARDWARE LIST	QTY
1	JCRC N6 X 40MM	2 PCS
2	ALLEN KEY N6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	4 PCS
5	U BRACKET	2 PCS
6	SCREW M4 X 20MM	4 PCS

STEP 2 U BRACKET AT THE FOOTBOARD

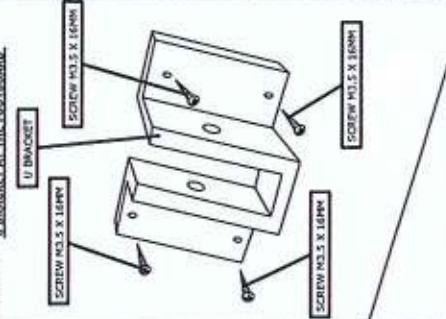

STEP 1 U BRACKET AT THE HEADBOARD

