
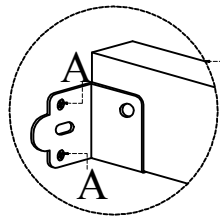


# ASSEMBLY INSTRUCTIONS

# ROCKDALE - King Bed



## STEP 5

Place centre rail on the Metal "U" Bracket on the Headboard and Footboard. Tighten the Screw to the marked points.

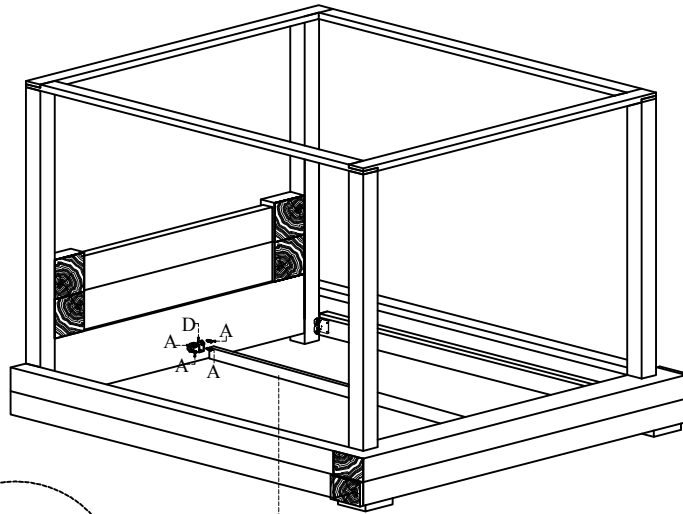

## STEP 6

Fasten it with JCBC and Nut Through the holes provided. Use allen key to tighten the JCBC Screws from Centre Rail until the screws are totally in.

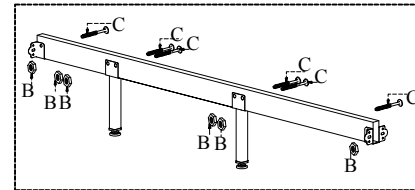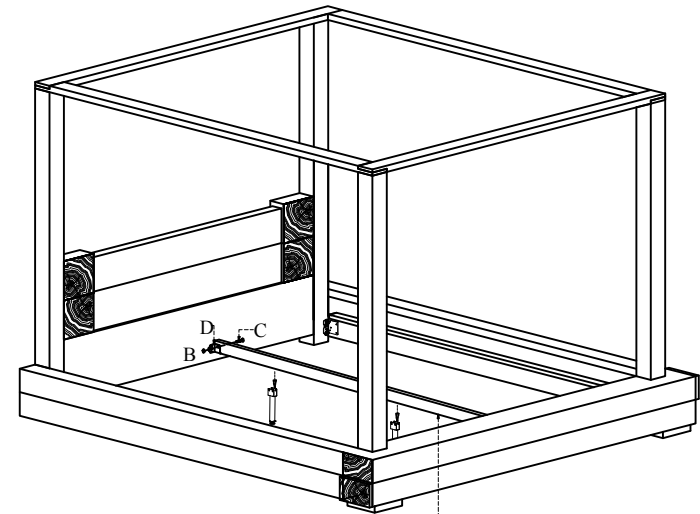

MADE IN MALAYSIA

PAGE 4 OFF 5