
ASSEMBLY INSTRUCTION

TITAN DESK WITH RECTANGULAR TOP (1500)


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

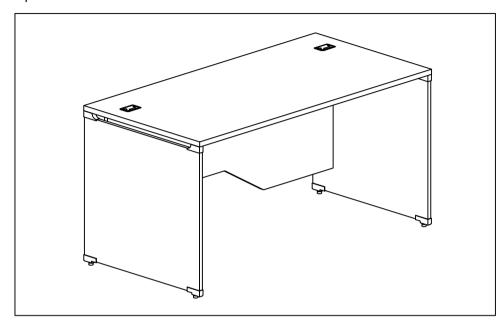

HARDWARE LISTS

| NO | DESCRIPTION | | QTY | NO | DESCRIPTION | | QTY |
|------------|-------------|-----------------------------|-----|----|-------------|--------------------|-----|
| Α | | Center Support | 4 | E | | Dowel Ø8 x 30mm | 7 |
| В | M | Bottom Support | 4 | F | (C) | Mınıfıx (60mm) | 4 |
| С | 0 | Adjuster | 4 | G | | Mınıfıx (35mm) | 6 |
| D | | Chipboard screw 4 x 25mm | 4 | Н | 8 | Plastic Cap | 10 |
| TWO PEOPLE | | | | | | Wire Hole Case | 2 |



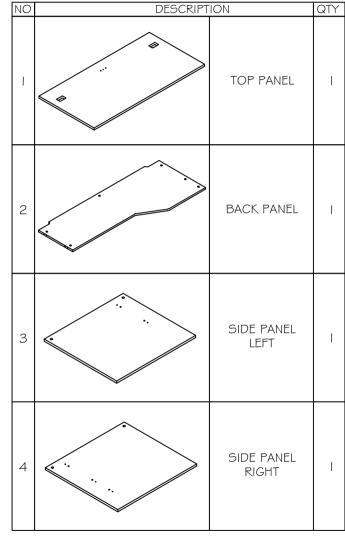


EXAMPLE FOR SKETCH ONLY

MADE IN MALAYSIA

^{**}Two people are required to set up this product.


STEP 1

Place the side panel left on smooth surface (For eg. Cloth, Carpet, Rug etc.). Attach the center supports to the top of side panel left. Then, fix the bottom supports to the bottom of side panel left by using adjuster and chipboard screws.

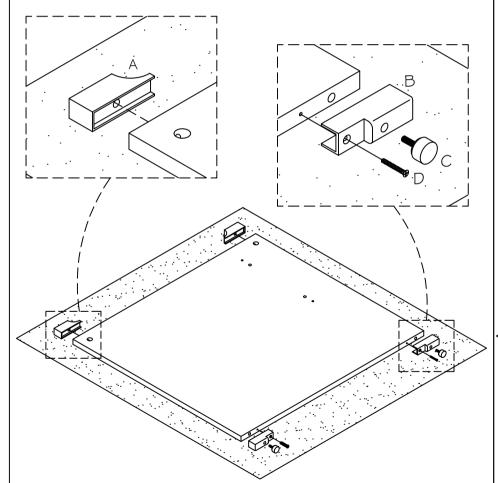


STEP 2


Place the side panel right on smooth surface (For eg. Cloth, Carpet, Rug etc.). Attach the center supports to the top of side panel right. Then, fix the bottom supports to the bottom of side panel right by using adjuster and chipboard screws.

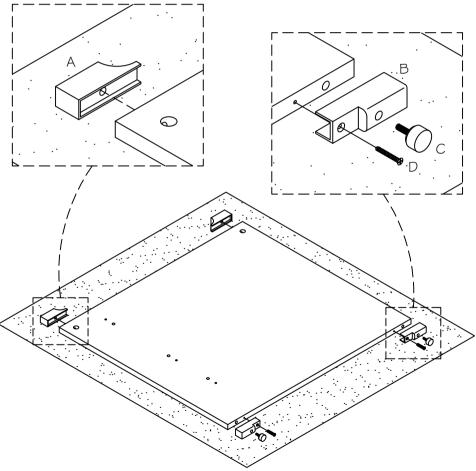

EXAMPLE FOR SKETCH ONLY

MADE IN MALAYSIA

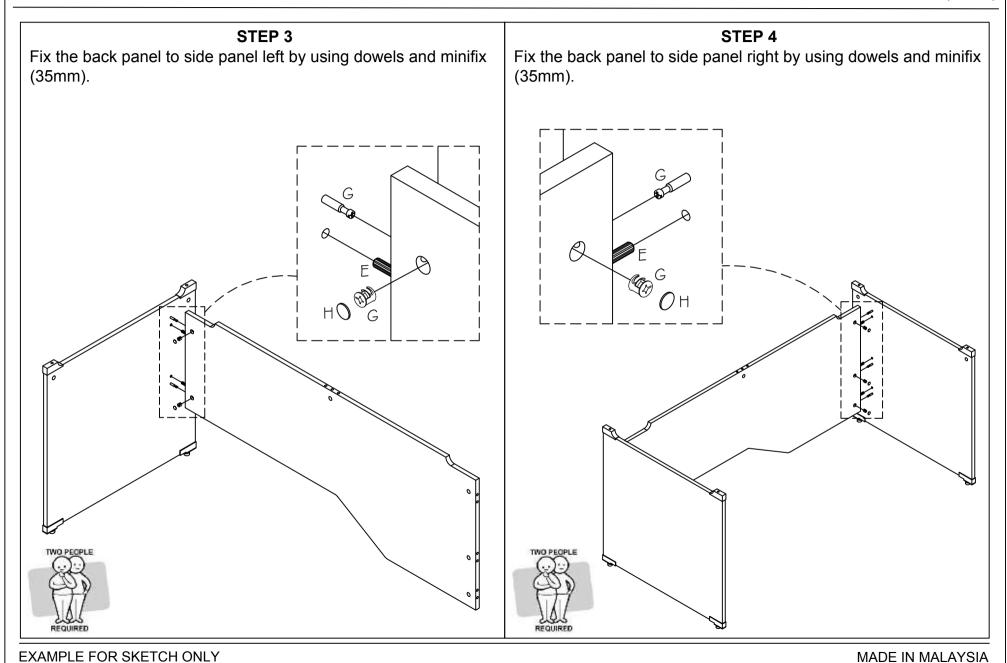

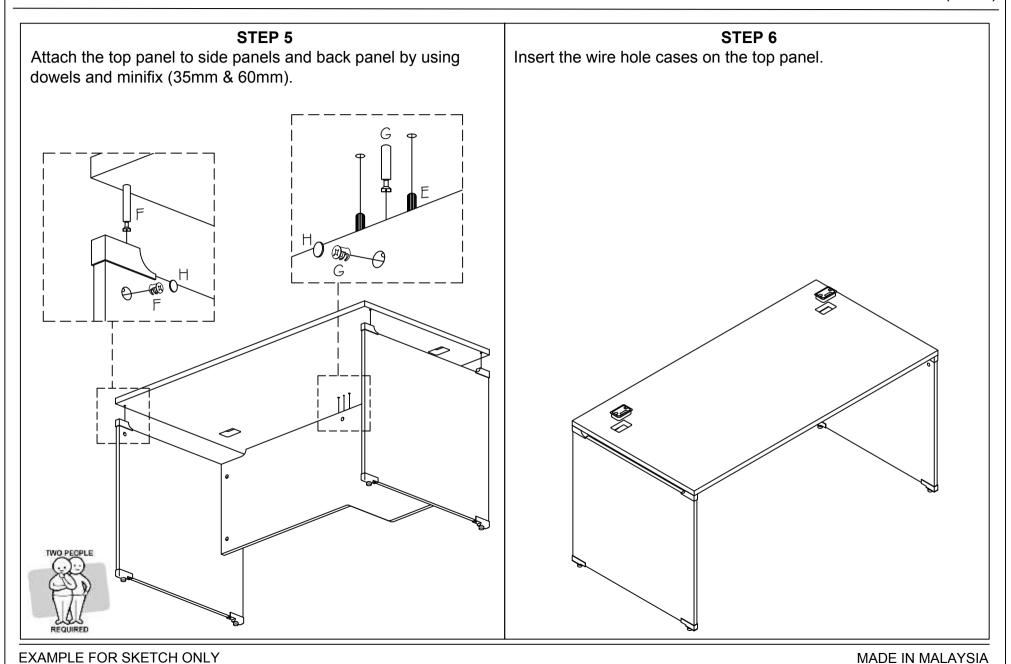

PAGE 4 OF 4