




**4** STEP 4 : Spread out all the Slat (E) on the Center Slat (F). Further secure JCBC screw with washer (J) to middle pre-drilled slot to the Center Slat (F). Fix the Support Leg (G) into the Slat Support (F) as show and adjust it to the height required.

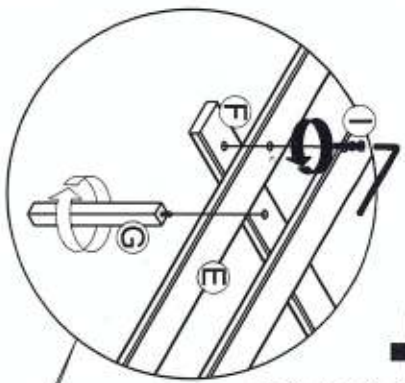

**5** STEP 5 : Finally, secure the Wooden Slat in place with the 32mm screws (I) with screw driver (\*not include)

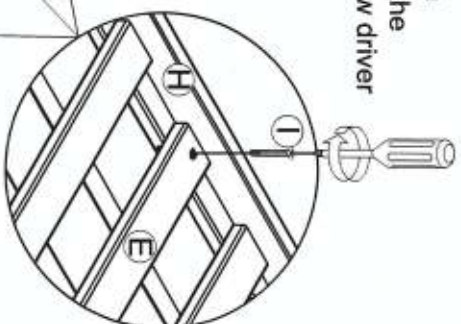

**3** STEP 3 Fix both side rails to the Headboard and Footboard as below

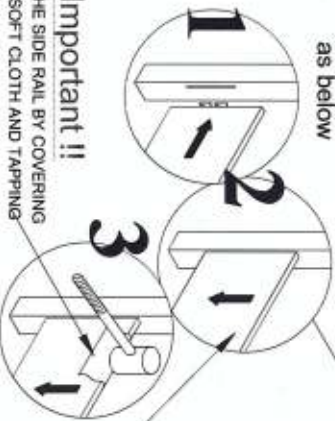

Press laterally into the groove and drop down.

**Important !!**  
LEVEL THE SIDE RAIL BY COVERING WITH A SOFT CLOTH AND TAPPING WITH A HAMMER.

**NOTE: MUST TIGHTEN SCREW PERIODICALLY WITH USE SCREWS WILL BECOME LOOSE CHECK TIGHT OF ALL SCREWS EVERY 6-8 WEEKS**

**CLEANING INSTRUCTION**

After assembly, clean & polish the complete parts if necessary with soft cloth using suitable recognized furniture polish.

