ASSEMBLY INSTRUCTION FOR 6-6788-FBD-AF-LVL-82"

efficial Instructions carefully.

*Carefully identify each component especially those that are similar.


*Separate and identify each component from that disease pack and set each one in its proper location before featuring.

*Clo not over lighten the screws or botts when exceptions.




TOOL REQUIRED




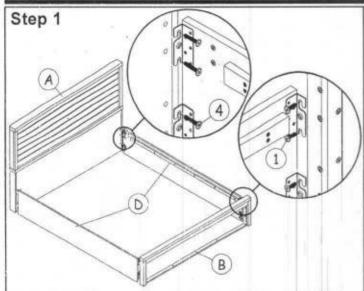

Fix headboard & footboard frame to the side rails with bolts '1' & '4' as shown. Important note: Do not tighten the bolts yet!

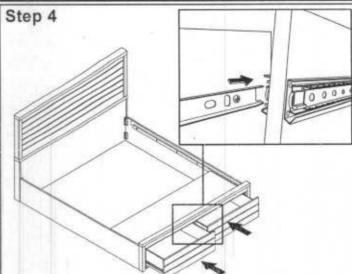


To insert back drawer into the box, please put drawer to the drawer slide as shown na push it slowly.

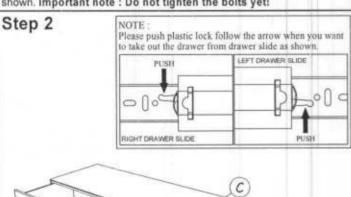





Before assemble footboard drawer to the footboard frame, please take out the drawer box first.

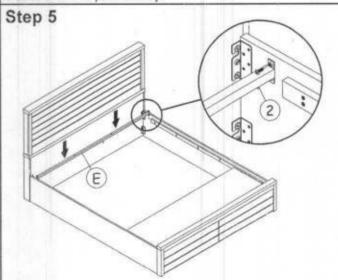


Fix cross bar 'E' to the side rail with bolts '2' as shown.

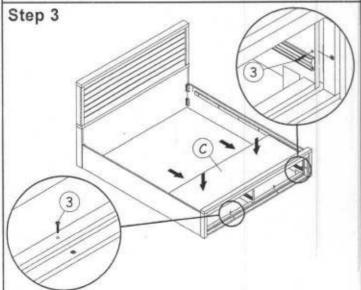

Fix footboard drawer to the footboard frame with bolts '3' as shown.

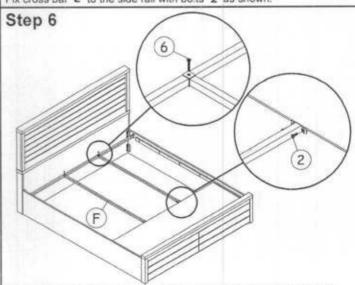

Fix center bar 'F' to the headboard frame and footboard drawer with bolts '2' & '3' as shown

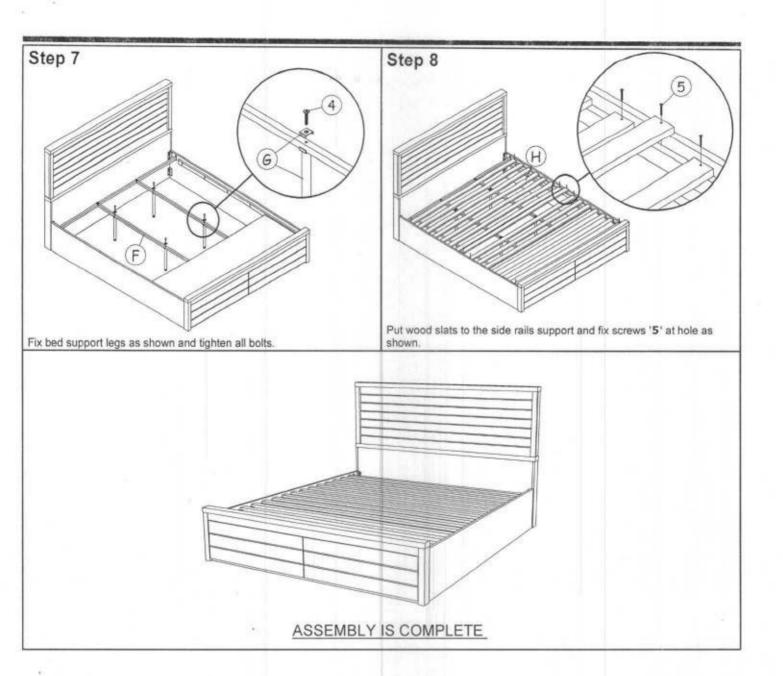

PARTS & HARDWARE LIST FOR 6-6788-FBD-AF-LVL-82"

NO.	PART	QTY.	NO.	HARDWARE		QTY.
				9	JCBC BOLT M8 x 25mm	8 PCS
Α	HEADBOARD		2	9	JCBC BOLT M6 x 15mm	8 PCS
В		1 UNIT	3	0	JCBC BOLT M6 x 30mm	6 PCS
	FOOTBOARD FRAME		4		JCBC BOLT M8 x 40mm	12 PCS
С	FOOTBOARD DRAWER	1 UNIT	5	(Samulation)	(4 pcs assembled) CSK SCREW #4 x 30mm	10 PCS
D	SIDE RAIL - L/R	2 PCS	6	0	JCBC BOLT M6 x 35mm	2 PCS
E	CROSS BAR	1 PC	7		ALLEN KEY - M6	1 PC
F	CENTER BAR	2 PCS	8		ALLEN KEY - M8	1 PC
G	SUPPORT LEG	4 PCS				
Н	WOOD SLAT (7pcs/set) + 1pc	2 SETS + 1 PC				