

ASSEMBLY INSTRUCTION


MODEL : PORTSEA
ITEM : BED (KING)

NO	HARDWARE LIST	QTY
1	BOLT M8 X 18MM	8 PCS
2	SCREW M4 X 38MM	12 PCS


Please follow this assembly instruction step by step

STEP 2


*NOTE : PLEASE REFER ASSEMBLY INSTRUCTION FOR CENTER SUPPORT.

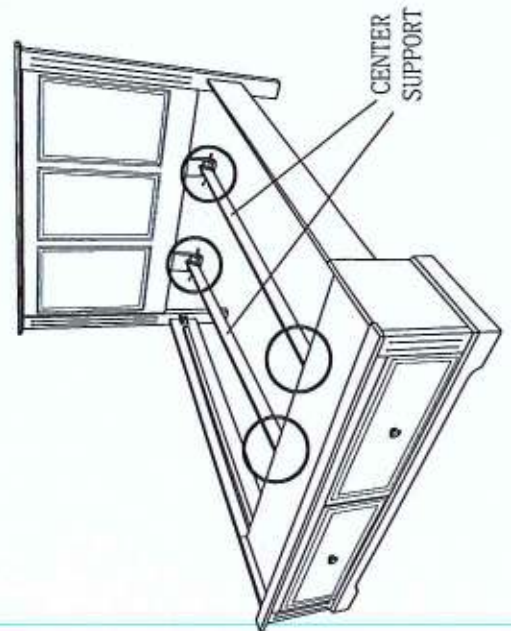


STEP 3

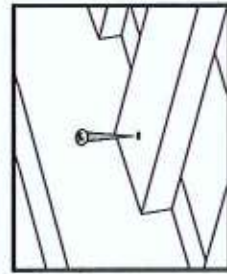


SCREW M4 X 38MM

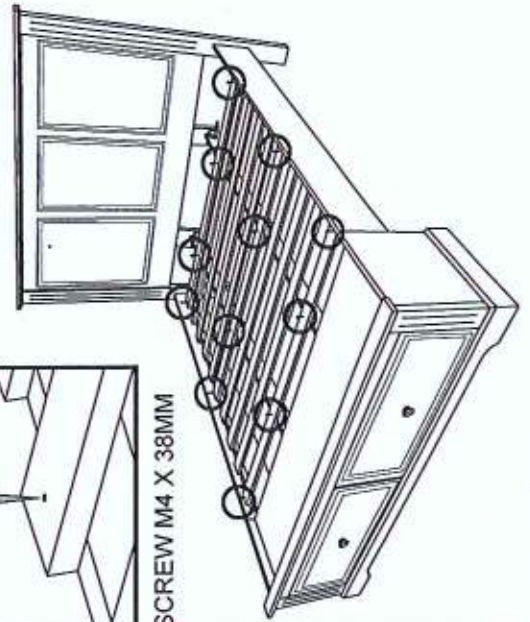


STEP 1

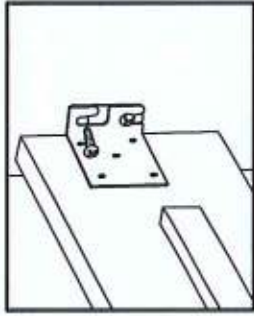

BOLT M8 X 18MM

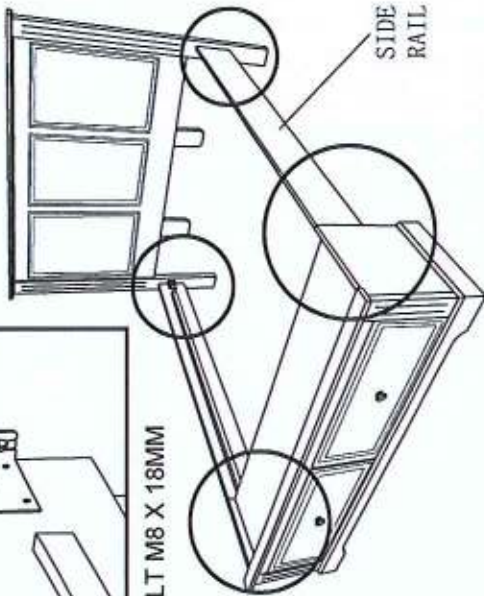

COMPLETE

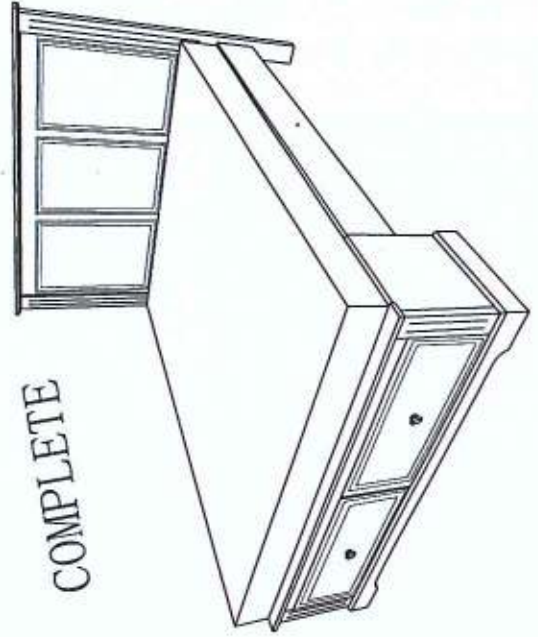


ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED
(KING)


please follow this assembly instruction step
by step

NO	HARDWARE LIST	QTY
1	JCRC M6 X 40MM	2 PCS
2	ALLEN KEY M6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	8 PCS
5	U BRACKET	4 PCS
6	SCREW M4 X 20MM	8 PCS


STEP 1 U BRACKET AT THE HEADBOARD

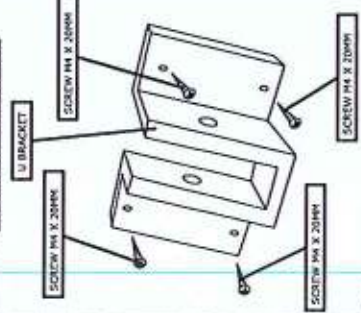

STEP 2 U BRACKET AT THE FOOTBOARD

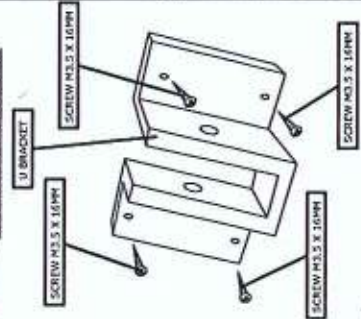

STEP 3

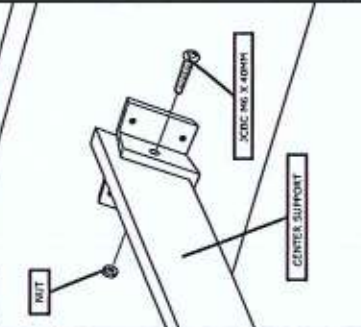


ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED
(KING)


please follow this assembly instruction step
by step

NO	HARDWARE LIST	QTY
1	JCRC M6 X 40MM	2 PCS
2	ALLEN KEY M6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	8 PCS
5	U BRACKET	4 PCS
6	SCREW M4 X 20MM	8 PCS


STEP 1 U BRACKET AT THE HEADBOARD

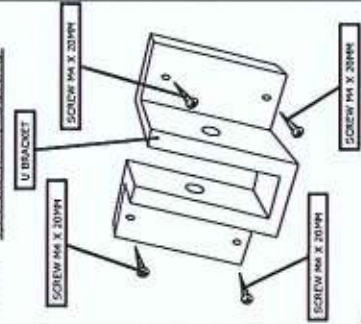

STEP 2 U BRACKET AT THE FOOTBOARD

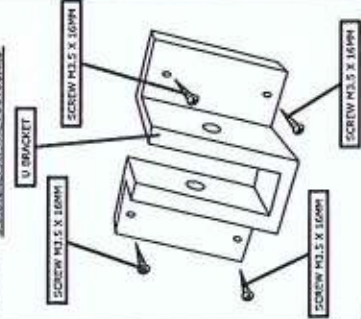

STEP 3

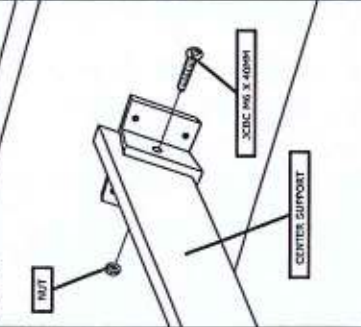


ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED
(KING)


please follow this assembly instruction step
by step

NO	HARDWARE LIST	QTY
1	JCRC M6 X 40MM	2 PCS
2	ALLEN KEY M6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	8 PCS
5	U BRACKET	4 PCS
6	SCREW M4 X 20MM	8 PCS


STEP 1 U BRACKET AT THE HEADBOARD

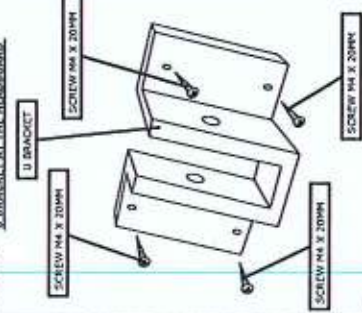

STEP 2 U BRACKET AT THE FOOTBOARD

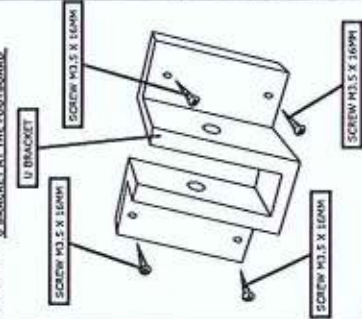

STEP 3

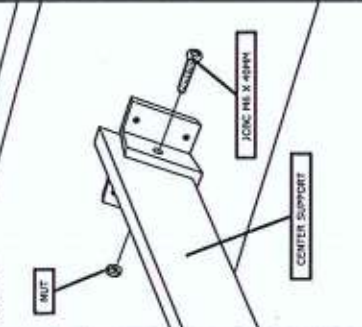


ASSEMBLY INSTRUCTION

ITEM : CENTER SUPPORT BED
(KING)


please follow this assembly instruction step
by step

NO	HARDWARE LIST	QTY
1	JCRC M6 X 40MM	2 PCS
2	ALLEN KEY M6	1 PC
3	NUT	2 PCS
4	SCREW M3.5 X 16MM	8 PCS
5	U BRACKET	4 PCS
6	SCREW M4 X 20MM	8 PCS

STEP 1 U BRACKET AT THE HEADBOARD

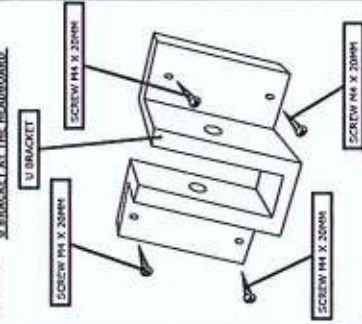

STEP 2 U BRACKET AT THE FOOTBOARD

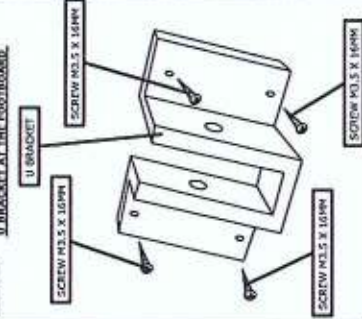

STEP 3

