

ASSEMBLY INSTRUCTION


MODEL : PORTSEA
ITEM : BED (QUEEN)

NO	HARDWARE LIST	QTY
1	BOLT M8 X 18MM	8 PCS
2	SCREW M4 X 38MM	9 PCS

Please follow this assembly instruction step by step

STEP 2


*NOTE : PLEASE REFER ASSEMBLY INSTRUCTION FOR CENTER SUPPORT.

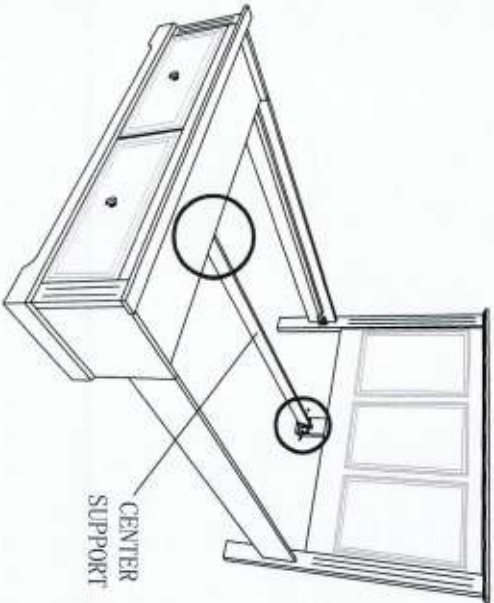


STEP 3




SCREW M4 X 38MM

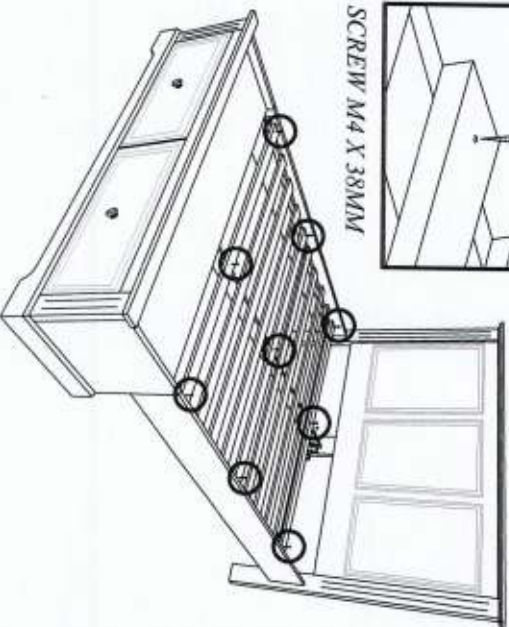

STEP 1

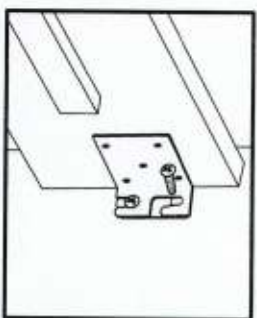


BOLT M8 X 18MM

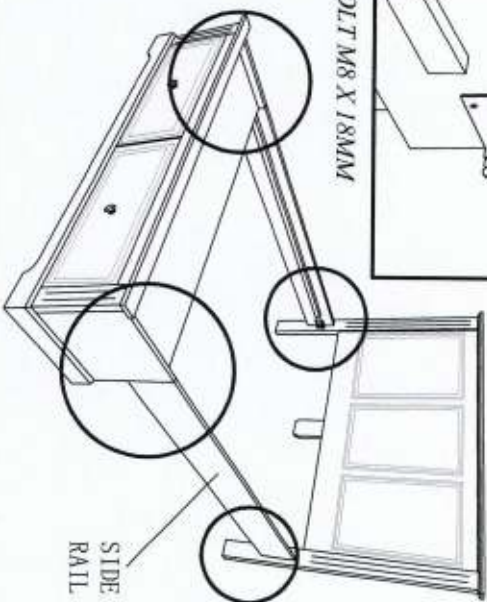

HEADBOARD

FOOTBOARD

COMPLETE

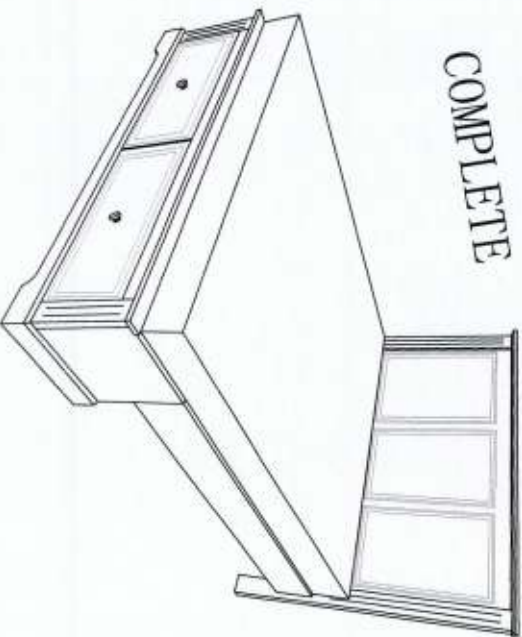

ASSEMBLY INSTRUCTION


MODEL : PORTSEA
ITEM : BED (KING)

NO	HARDWARE LIST	QTY
1	BOLT M8 X 18MM	8 PCS
2	SCREW M4 X 38MM	12 PCS


Please follow this assembly instruction step by step

STEP 2



*NOTE : PLEASE REFER ASSEMBLY INSTRUCTION FOR CENTER SUPPORT.

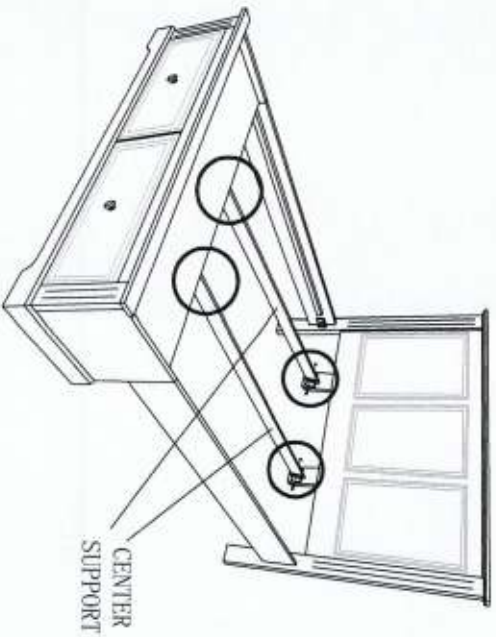

STEP 3

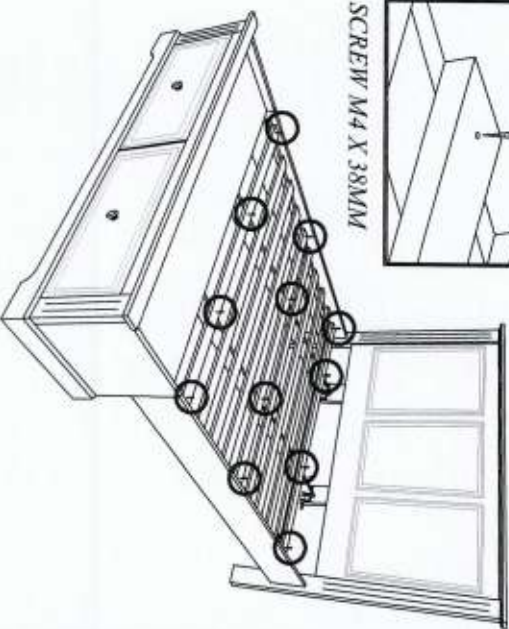

STEP 1

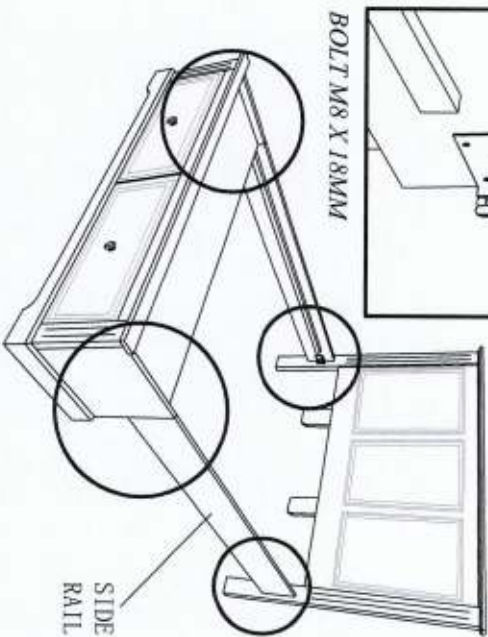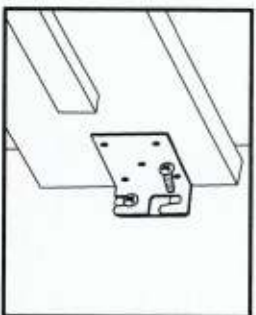

COMPLETE

